




LOOKING INTO ECU

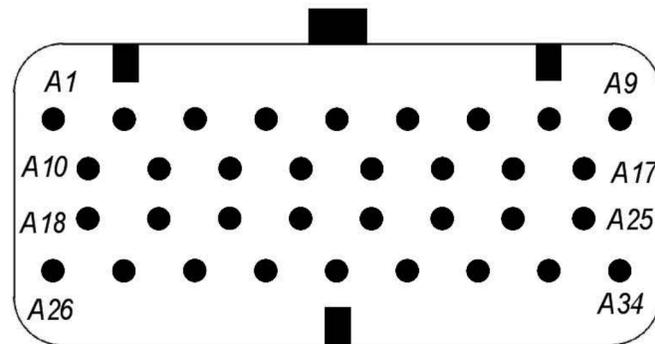

CONNECTOR A

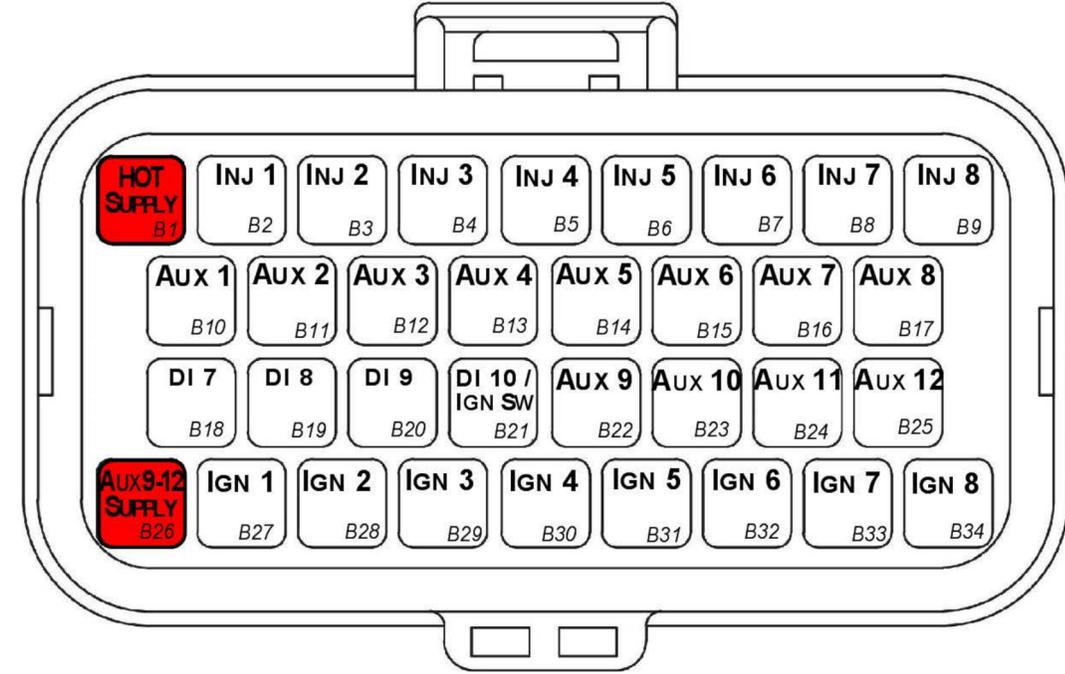

LOOKING INTO ECU

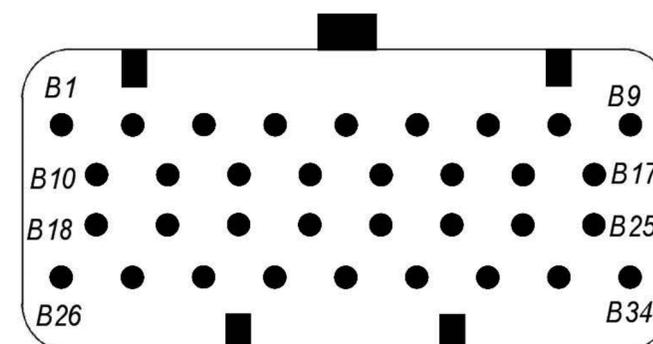

CONNECTOR B

**NOTE 1:** The **Sensor 0V Ref** pin is a specialised ground output for all analog sensors. Connect direct to the sensor 0V pin, **DO NOT** connect to the Engine Block or ECU Ground.

**NOTE 2:** Ignition Outputs are TTL level designed to drive Ignitors. **DO NOT** connect directly to a coil.

**NOTE 3:** The **HOT** pin should be supplied with a constant 12V supply. This pin is used for Fly-wheeling and allows an ECU managed power-down procedure.